


CALL DEA ENERGY SERVICES
AFTER WIRING IS COMPLETED TO
SCHEDULE LOAD CONTROL
RECEIVER INSTALLATION.

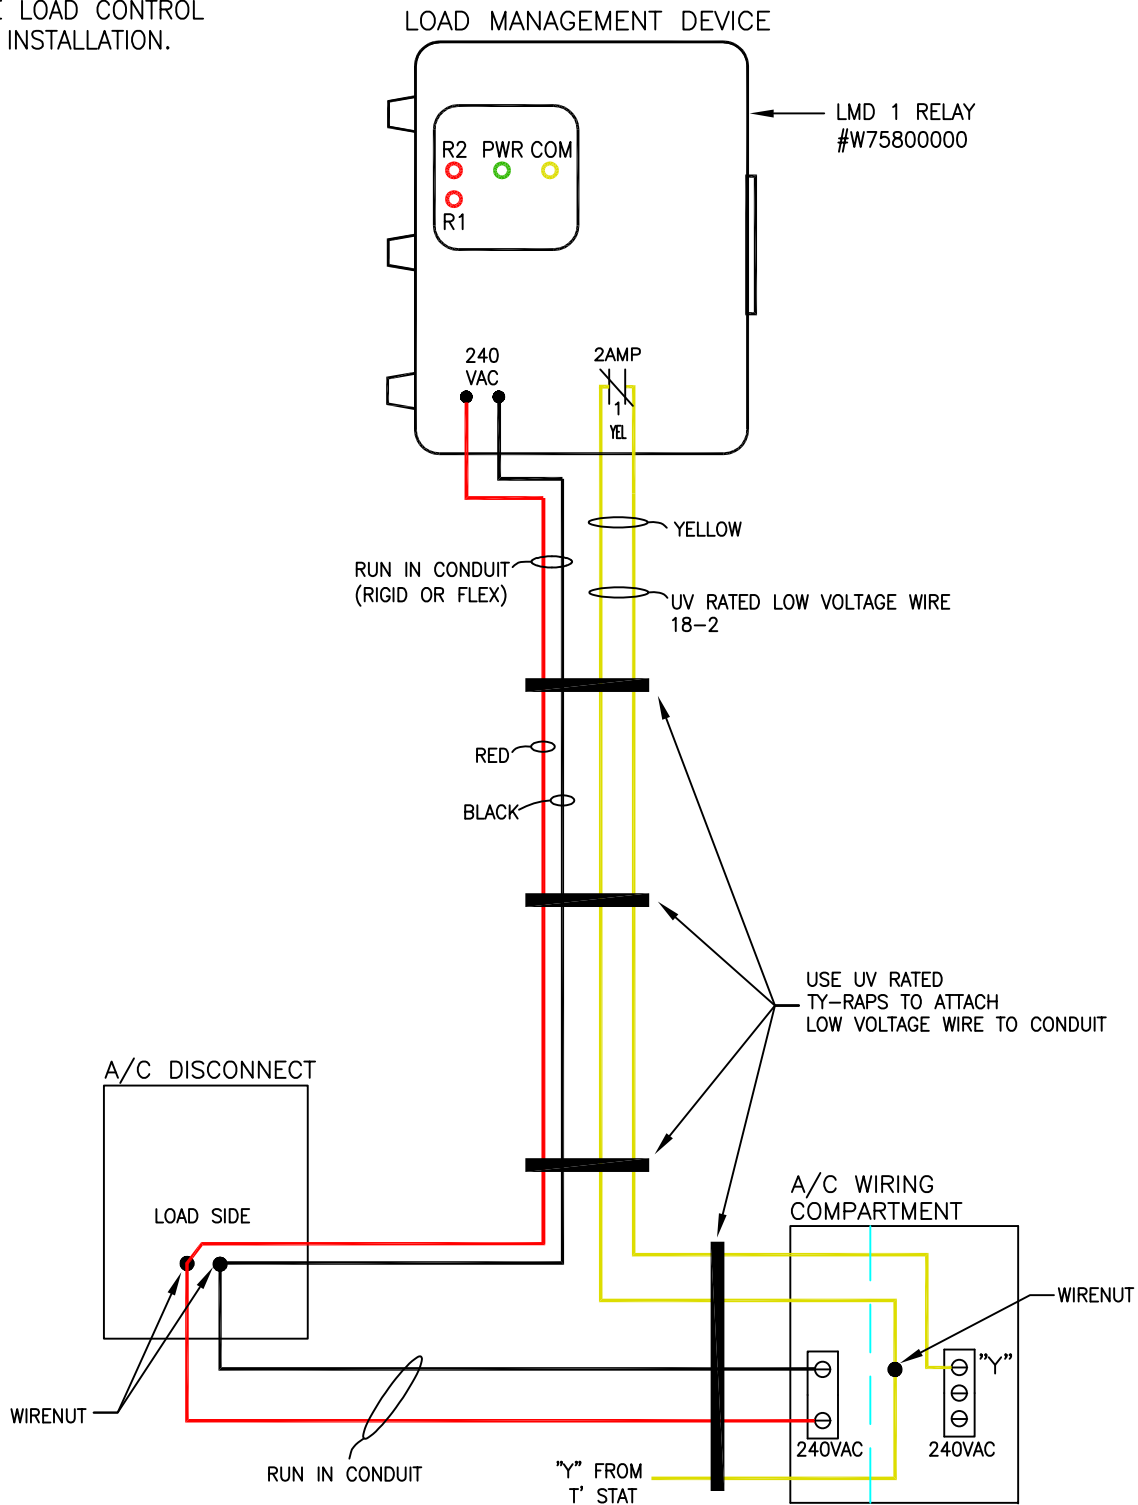

NOTES:

1. LOCATE RECEIVER AT A/C DISCONNECT AT LEAST 3' OFF GROUND.
2. ALL WIRES SHALL BE COPPER.
3. ALL WIRING SHALL MEET THE REQUIREMENTS OF THE NATIONAL ELECTRICAL CODE. (NEC)

DAKOTA ELECTRIC ASSOCIATION		
GUIDE DRAWING		NON-METERED CYCLE AIR
THIS DRAWING WAS DEVELOPED FOR A TYPICAL INSTALLATION AND MAY NOT BE APPLICABLE TO ALL INSTALLATIONS CONSULT AN EXPERT FOR FINAL INSTALLATION DESIGN		CLASS 1 / DIV 1-8
OWNER	ENG. MANAGER	NO.
DATE	02/28/2023	DIA-11D